



- All fixtures have 2 mounting points
- Cubra mounting points are inset from ends, chart below shows center to center of mount points
- When using continuous runs, lens breaks will occur at every joint, joints are 3/16" thick
- Flat endcap adds 3/8" per end, all other add 1-1/4" per end.
- One remote box will be provided with each fixture regardless if it is an individual or in a run. For example a 9' run of (5'+4") will require 2 power drops and 2 non-power drops. Specifying a battery or emergency circuit will require additional remote boxes.

Individual Fixtures

LENGTH	UNIT	MOUNTING SPACING
1	.	8" center to center
2	..	20" center to center
3	...	24" center to center
4	24" center to center
5	48" center to center
6	48" center to center
7	48" center to center
8	48" center to center

Row Breakdowns

LENGTH	FIXTURES	BREAKDOWN
9	5' + 4'
10	5' + 5'
11	6' + 5'
12	6' + 6'
13	7' + 6'
14	7' + 7'
15	8' + 7'
16	8' + 8'
17	6' + 5' + 6'
18	6' + 6' + 6'
19	6' + 7' + 6'
20	7' + 6' + 7'
21	7' + 7' + 7'
22	8' + 6' + 8'
23	8' + 7' + 8'
24	8' + 8' + 8'
25	7' + 6' + 6' + 6'
26	7' + 7' + 7' + 5'
27	7' + 7' + 7' + 6'
28	7' + 7' + 7' + 7'
29	8' + 8' + 8' + 5'
30	8' + 8' + 8' + 6'
31	8' + 8' + 8' + 7'
32	8' + 8' + 8' + 8'