 



ADEO INSTALLATION INSTRUCTIONS

Grid Ceiling Installation	2-3
Inaccessible Installation	4-7
Surface Mount Box Installation	. 8-10
Maintenance Sheet	11






ADEO GRID CEILING INSTALLATION

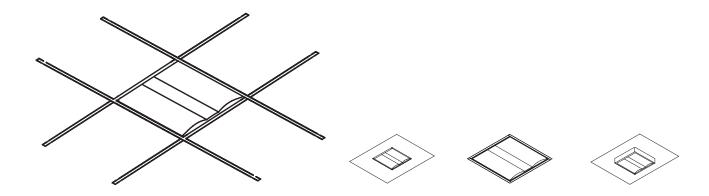



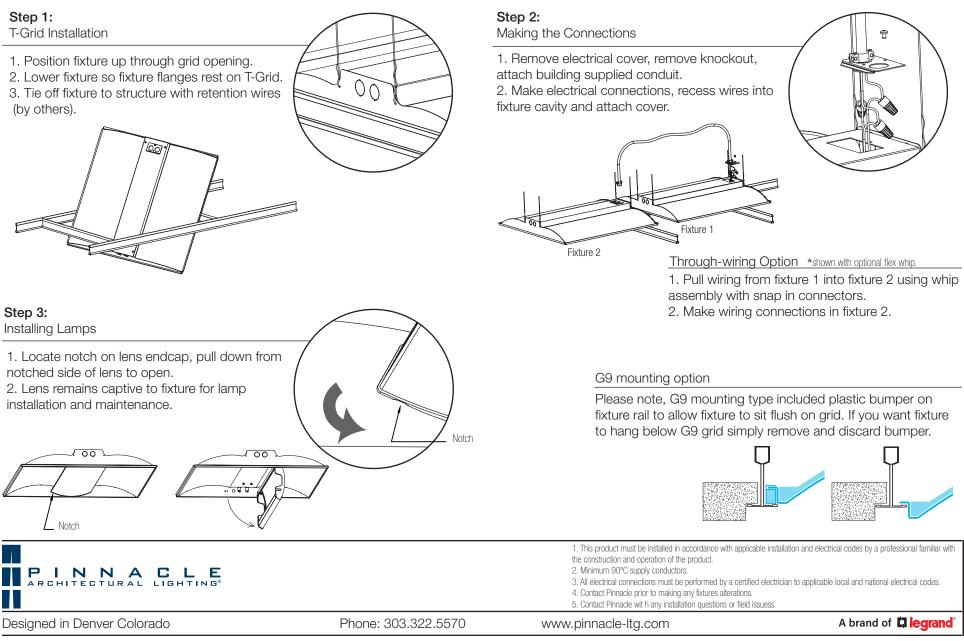


All of Pinnacle's packaging is recyclable with the exception of the straps on the pallets. Please reach out to the factory if you need assistance in recycling any packaging components.


3 of 11



ADEO INACCESSIBLE INSTALLATION

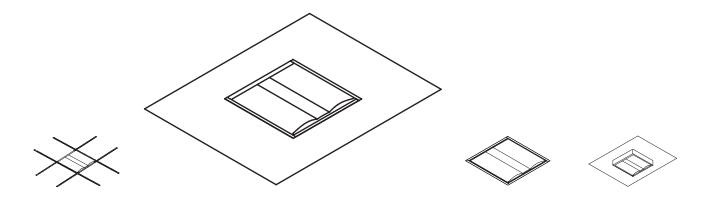


ADEO Inaccessible Installation

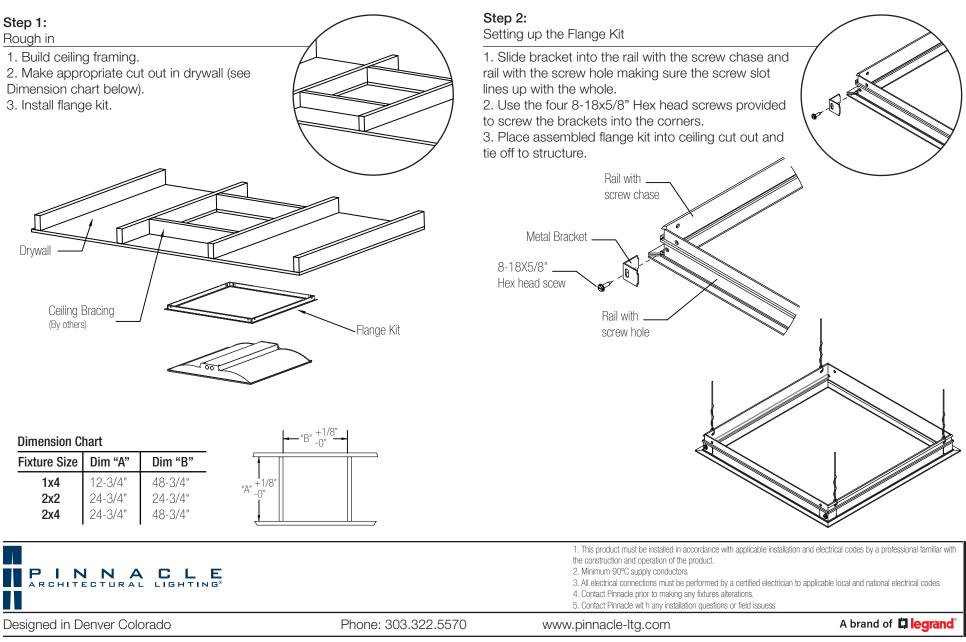



All of Pinnacle's packaging is recyclable with the exception of the straps on the pallets. Please reach out to the factory if you need assistance in recycling any packaging components. © 2023 Pinnacle Architectural Lighting

5 of 1

 _



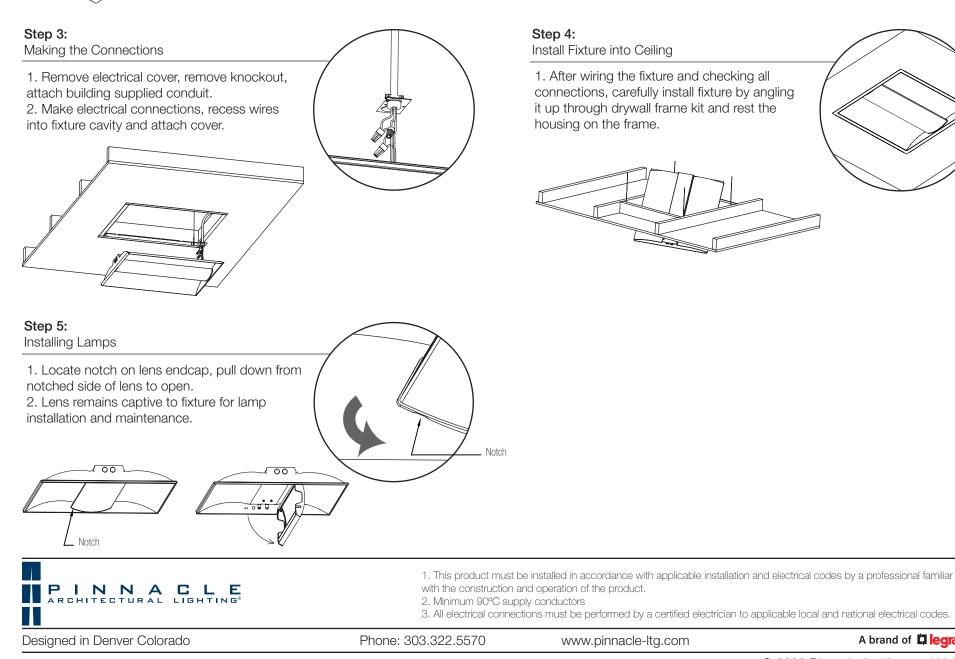

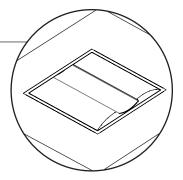


A brand of **Clegrand**


© 2023 Pinnacle Architectural Lighting All of Pinnacle's packaging is recyclable with the exception of the straps on the pallets. Please reach out to the factory if you need assistance in recycling any packaging components.



ADEO SURFACE MOUNT BOX INSTALLATION

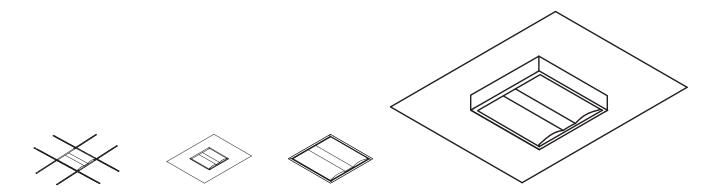



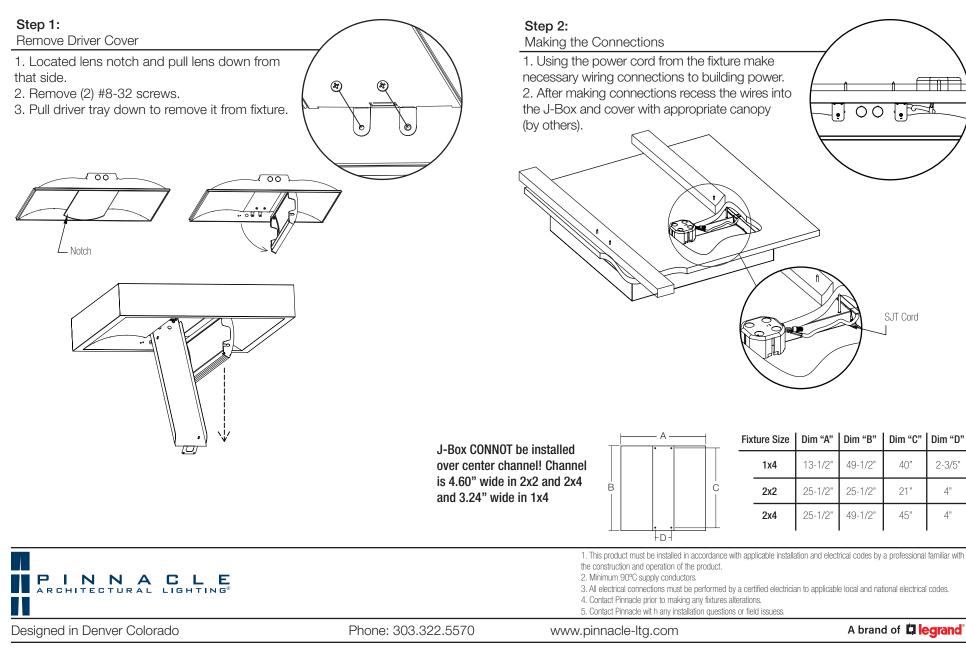

101

2-3/5"

Δ"

4"

00

Q

_

-

© 2023 Pinnacle Architectural Lighting All of Pinnacle's packaging is recyclable with the exception of the straps on the pallets. Please reach out to the factory if you need assistance in recycling any packaging components.





Step 3:

 
Mounting / Finishing.

1. Inside driver channel locate holes in corners (one in each corner) .

 Using these holes (4) mount fixture to structure with appropriate mounting hardware (by others).
 Re-install driver cover, Install lamps, close fixture.

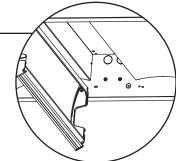

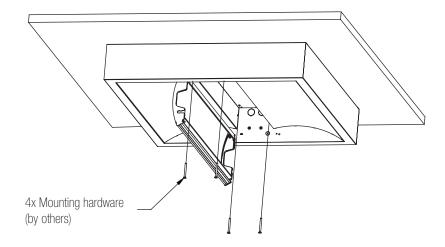





All of Pinnacle's packaging is recyclable with the exception of the straps on the pallets. Please reach out to the factory if you need assistance in recycling any packaging components. © 2023 Pinnacle Architectural Lighting




 
ADEO MAINTENANCE SHEET





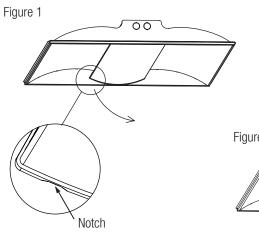

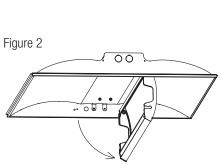

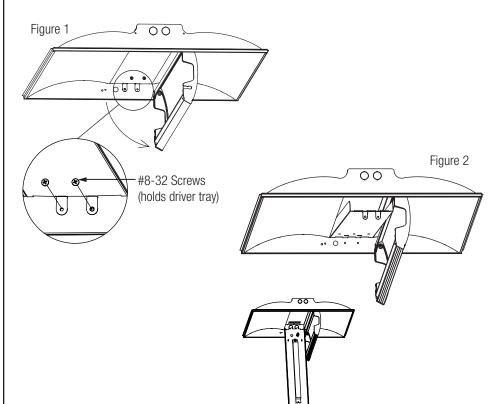

Access to board

1. Disconnect power.

2. Locate lens notch (located on one side only) and pull lens down from that side (Fig 1).

3. Lens swings open allowing access to boards (Fig 2).

4. Lens remains captive to fixture during maintenance (Fig 2).

Lens Cleaning

- 1. Open lens (as instructed)
- 2. Lens remains captive to fixture during maintenance/cleaning.
- 3. Wipe top and bottom of lenses with Isopropyl alcohol and a clean rag (DO NOT USE AMMONIA).
- 4. Close by rotating and pushing lens up until it snaps in place.



Designed in Denver Colorado

Access to driver

- 1. Disconnect power.
- 2. To access the driver, remove #8-32 screws (fig. 1).
- 3. Pull driver tray off as shown (fig. 2) and driver will be fully accessible.
- 4. Reverse step 2 prior to closing lens.
- 5. Close by rotating and pushing lens up until it snaps in place.

	Phone: 303.322.5570	www.pinnacle-ltg.com	A brand of 🖨 legrand®	-
		5. Contact Pinnacle with any installation questions or field iss	ues.	
		Contact Pinnacle prior to making any fixtures alterations.		ц,
TING®	3. All electrical connections must be performed by a certified electrician to applicable local and national electrical codes.			0
I F		Minimum 90°C supply conductors.		
		the construction and operation of the product.		-
		 This product must be installed in accordance with applicat 	ole installation and electrical codes by a professional familiar with	

All of Pinnacle's packaging is recyclable with the exception of the straps on the pallets. Please reach out to the factory if you need assistance in recycling any packaging components. O 2023 Pinnacle Architectural Lighting