


cove

Installation Instructions

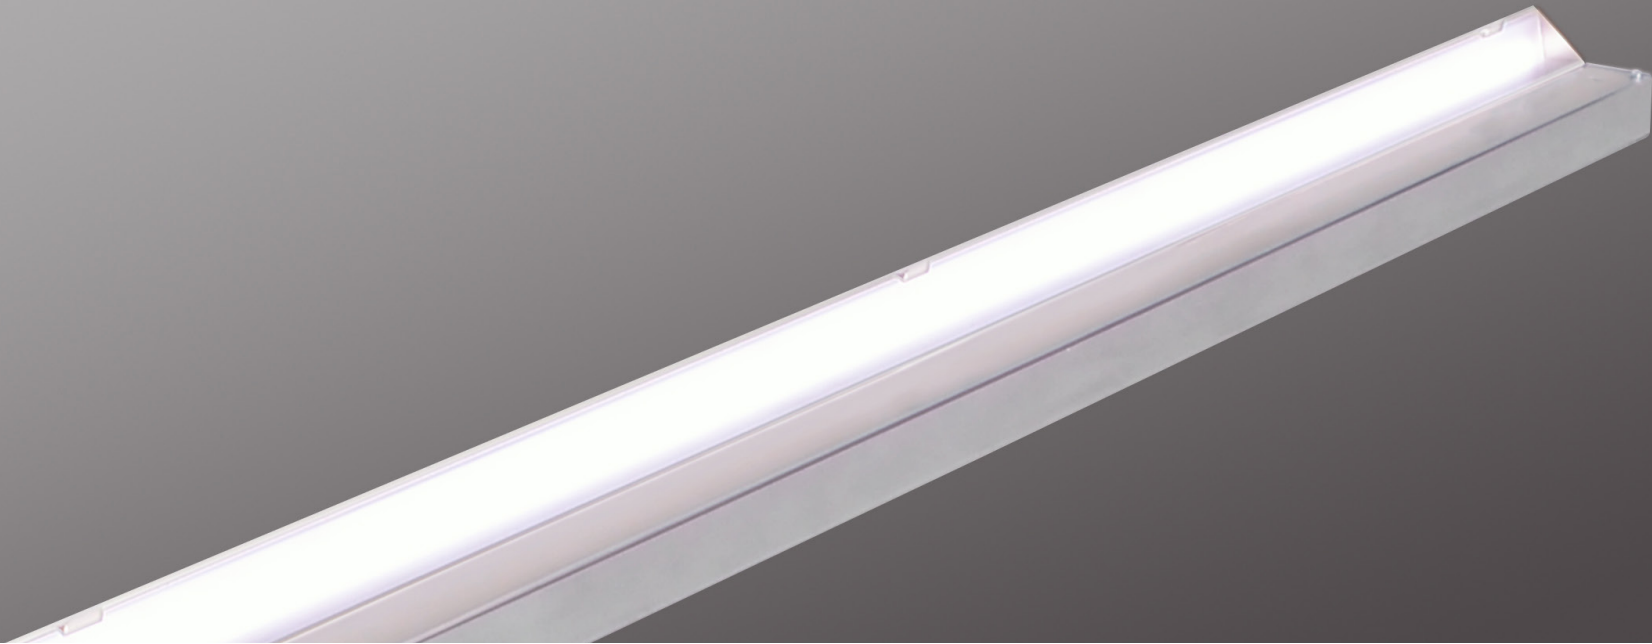

Ceiling Installation.....2


Designed in Denver, CO • USA | pinnacle-ltg.com | O: 303-322-5570 | F: 303-322-5568

A brand of **legrand**

DISCLAIMERS | This product must be installed in accordance with applicable installation and electrical codes by a professional familiar with the construction and operation of the product. Minimum 90° C supply conductor. All electrical connections must be performed by a certified electrician to applicable local and national electrical codes. Damaged components must never be used. Contact Pinnacle prior to making any fixture alterations. Contact Pinnacle with any installation questions or field issues.

1 Layout + Mounting



Layout placement of fixture(s) in cove, tilt fixture head all the way back and secure fixture to cove using appropriate hardware. (by others)

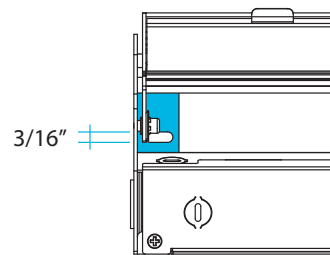

Fixture Lengths	
Nominal	Actual
2'	24-3/8"
3'	36-3/8"
4'	48-3/8"
6'	72-3/8"
8'	96-3/8"


3 Aiming the Fixture

The fixture beam can be adjusted to fixed angles of 105, 117.5, 130. Additional angles can be achieved by shimming the fixture at installation. To adjust the reflector, rotate the reflector into position until it locks into place.

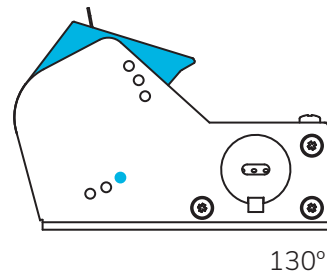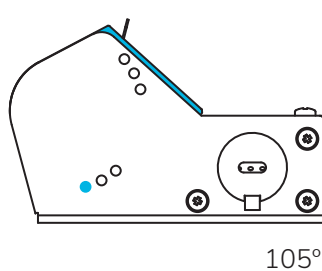

2 Powering the Fixture



Remove electrical cover. Remove K.O. or plug. Attach 1/2" connector (by others) feed power wires into fixture, make necessary connections. Replace electrical cover. All electrical connections by others.

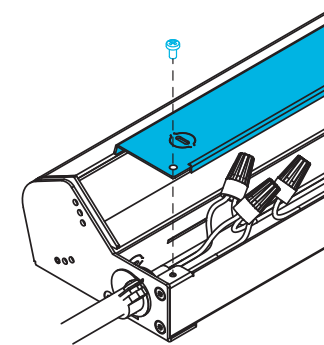

4 Joining Fixtures (Optional)

Figure A | Single circuit fixtures are supplied with Quick Connects for fixture to fixture connections.

Figure B | Fixtures that have additional circuits or batteries can be connected fixture to fixture using a nipple (by others).

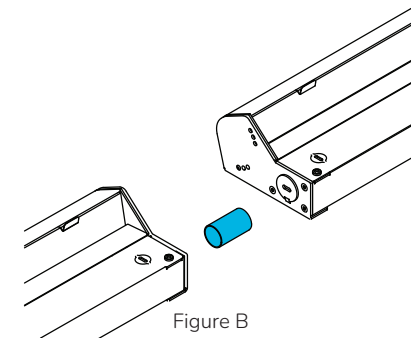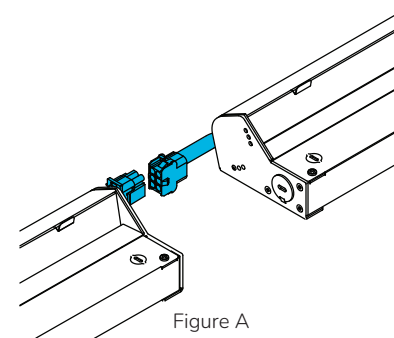

DISCLAIMERS | All of Pinnacle's packaging is recyclable with the exception of the straps on the pallets. Please reach out to the factory if you need assistance in recycling any packaging components. This product must be installed in accordance with applicable installation and electrical codes by a professional familiar with the construction and operation of the product. Minimum 90° C supply conductor. All electrical connections must be performed by a certified electrician to applicable local and national electrical codes. Damaged components must never be used. Contact Pinnacle prior to making any fixture alterations. Contact Pinnacle with any installation questions or field issues.